

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential setting. This product generates, uses, and can radiate radio frequency energy and, if not installed and used as directed, it may cause harmful interference to radio communications. Although this product complies with the limits for a Class B digital device, there is no guarantee that interference will not occur in a particular installation.

CE Compliance

This device has been tested and found to comply with the following European Union directives: Electromagnetic Capability (89/336/EMC), Low Voltage (73/23/EEC) and R&TTED (1999/5/EC).

Limited Warranty

WE'RE HERE TO HELP YOU! NEED ASSISTANCE SETTING UP THIS PRODUCT?

Make sure you:

1. Use the live chat at www.iogear.com to try and solve any issues you may be having with the product
2. Visit the Tech Info Library/FAQ on www.iogear.com (under the Support tab)
3. Call the tech support line at 1-866-946-4327 (U.S. only) or 1-949-453-8782

Warranty Information

This product carries a 3 Year Limited Warranty. For the terms and conditions of this warranty, please go to <http://www.iogear.com/support/warranty> or call 1-866-946-4327

Register online at <http://www.iogear.com/register>

Important Product Information

Product Model _____
Serial Number _____

Contact

IOGEAR Inc.

Address: 19641 Da Vinci, Foothill Ranch, CA 92618 USA
Toll Free: 866-9-IOGEAR
Phone: 949-453-8782
Web site: www.iogear.com
Email: support@iogear.com



Quick Start Guide

Multi-Link Bluetooth Keyboard with Touchpad

Package Contents

- 1 x Multi-Link Bluetooth Keyboard with Touchpad
- 2 x AA Battery
- 1 x Quick Start Guide
- 1 x Warranty Card

Requirements

Computer / Device*

- Bluetooth Enabled Host Device

Operating System

- Windows XP
- Windows Vista (32-bit / 64-bit)
- Windows 7 (32-bit / 64-bit)
- Mac OS X v10.3.9 or later***

* Device must support USB HID keyboard device and USB HID-compliant mouse in order to have the keyboard and mouse functionality respectively.

** Media Center hotkeys are only supported with the operating systems that have Microsoft Windows Media Center.

*** Some Mac special keys may not work


Keyboard – Front View

- 1. Mute Button
- 2. Default Homepage (Internet Explorer)
- 3. E-Mail
- 4. Previous Page
- 5. Next Page
- 6. Search
- 7. Refresh
- 8. Battery Low/Pairing Indicator
- 9. Touchpad
- 10. Mouse Left Click
- 11. Mouse Right Click




Keyboard – Back View

- 1. On/Off Switch
- 2. Reset Button
- 3. Battery Cover

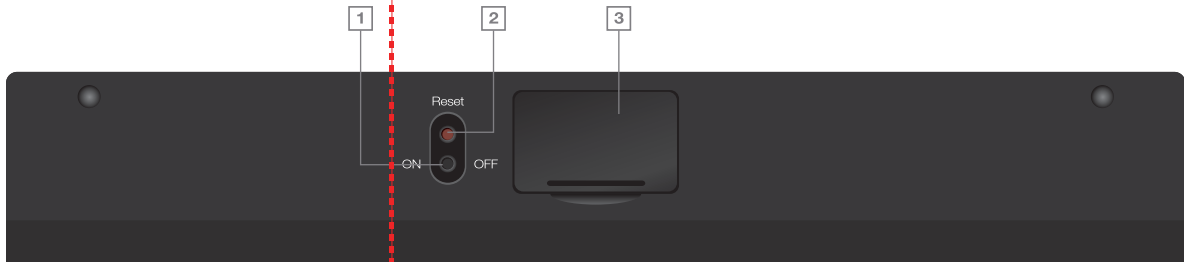

Battery Installation

- 1. Open the battery cover in the back of the keyboard
- 2. Insert the two AA alkaline batteries. Make sure the batteries are installed properly as per the directions that are indicated inside the battery tray.
- 3. Close the battery cover

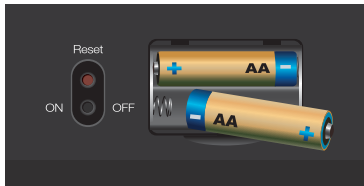

Pairing Keyboard

- Pairing Bluetooth keyboard with Bluetooth enabled device or Bluetooth Host**
1. Turn on the device or Bluetooth Host and make sure the Bluetooth device is set in “Search” mode.
 2. Switch Bluetooth keyboard (GKM611B) power to **“On”** position.
 3. Press and hold **“Fn”** and then press **“1”** on the Bluetooth keyboard. Then release together.
 4. Press **“Reset”** button on the back of the keyboard to activate Bluetooth discovering. (Pairing indicator LED on the keyboard will flash during pairing)
 5. Launch the Bluetooth program in the Bluetooth enabled device or Bluetooth Host
 6. Add (Search) for new devices. Users should be able to find a new device “GKM611B”.
 7. During the connection process, Bluetooth enabled device will provide a pass CODE for pairing. Enter the pass CODE from the keyboard.
 8. Wait for adding a new HID device “GKM611B” into the system.

- Pairing Bluetooth keyboard with additional Bluetooth enabled devices or Bluetooth Hosts**
1. Turn on the device or Bluetooth Host and make sure the Bluetooth device is set in “Search” mode.
 2. Switch Bluetooth keyboard (GKM611B) power to **“On”** position.
 3. Press and hold **“Fn”** and then press **“2”** on the Bluetooth keyboard. Then release together.
 4. Press **“Reset”** button on the back of the keyboard to activate Bluetooth discovery mode. (Pairing indicator LED on the keyboard will flash during pairing)

Subsequent steps are the same as pairing with the first device. The Bluetooth keyboard can pair with up to 6 different Bluetooth enabled devices. The user can use the keyboard to control 6 different Bluetooth enabled devices.

For Toshiba Bluetooth Program User:
In order to link to Toshiba based Bluetooth program, please follow the below steps:

1. Turn on the device of Bluetooth Host and make sure the Bluetooth device is set in “Search” mode.
2. Switch Bluetooth keyboard (GKM611B) power to **“On”** position.
3. Press and hold **“Fn”** and then press **“1”** on the Bluetooth keyboard. Then release together.
4. Press **“Reset”** button on the back of the keyboard to activate Bluetooth discovery mode. (Pairing indicator LED on the keyboard will flash during pairing)
5. Press and hold **“Fn”** and then press **“7”** on the Bluetooth keyboard. Then release together.

Switching to the desired device

1. Make sure to turn on Bluetooth for the desired device
2. Press and hold “Fn” and press the device number (1~6). Then release together.
3. The keyboard will connect to desired device.

User also can press and hold “Fn” and press “Tab” to connect to the previous device.

Important: If a user switches to an unpaired device number, the user will need to wait about 2~5 second to switch to another device.

Master Reset

If a user forgets which devices paired with the keyboard and would like to reset the keyboard to factory default, simply press and hold the “Reset” button for more than 3 seconds. The keyboard will erase all devices which were paired with the keyboard.

Function Keys

There are 20 sets of function keys in this keyboard. To invoke these functions, hold the function button (Fn) then press the function key (the keys with blue letters).

Normal Function Keys	
Function	Description
Home	Fn + Home
End	Fn + End
Insert	Fn + Ins
Page Up	Fn + PgUp
Page Down	Fn + PgDn

Media Center Shortcut Keys	
Function	Description
Launch Windows Media Center	Fn + MCE
Launch My TV	Fn + My TV
Launch My Videos	Fn + My Videos
Launch My Music	Fn + My Music
Launch My Pictures	Fn + My Pictures
Record TV	Fn + Record TV
Play DVD (within Media Center only)	Fn + DVD
Rewind	Fn + ◀◀
Fast Forward	Fn + ▶▶
Play/Pause	Fn + ▶/⏸
Stop	Fn + ■
Volume Up	Fn + 🔊
Volume Down	Fn + 🔊
Channel Up	Fn + Ch+
Channel Down	Fn + Ch-