

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential setting. This product generates, uses, and can radiate radio frequency energy and, if not installed and used as directed, it may cause harmful interference to radio communications. Although this product complies with the limits for a Class B digital device, there is no guarantee that interference will not occur in a particular installation.

## CE Compliance

This device has been tested and found to comply with the following European Union directives: Electromagnetic Capability (89/336/EMC), Low Voltage (73/23/EEC) and R&TTED (1999/5/EC).

## Limited Warranty

### WE'RE HERE TO HELP YOU! NEED ASSISTANCE SETTING UP THIS PRODUCT?

Make sure you:  
1. Use the live chat at [www.iogear.com](http://www.iogear.com) to try and solve any issues you may be having with the product  
2. Visit the Tech Info Library/FAQ on [www.iogear.com](http://www.iogear.com) (under the Support tab)  
3. Call the tech support line at 1-866-946-4327 (U.S. only) or 1-949-453-8782

### Warranty Information

This product carries a 3 Year Limited Warranty. For the terms and conditions of this warranty, please go to <http://www.iogear.com/support/warranty> or call 1-866-946-4327

Register online at <http://www.iogear.com/register>

### Important Product Information

Product Model \_\_\_\_\_  
Serial Number \_\_\_\_\_

## Contact

**IOGEAR Inc.**  
Address: 19641 Da Vinci, Foothill Ranch, CA 92618 USA  
Toll Free: 866-9-IOGEAR  
Phone: 949-453-8782  
Web site: [www.iogear.com](http://www.iogear.com)  
Email: [support@iogear.com](mailto:support@iogear.com)



## Quick Start Guide

### Mini Multi-Link Bluetooth Keyboard

© 2011 IOGEAR®

GKB601B  
Q1165

1

## Overview

### Start Here!


### Keyboard – Front View

1. Battery Low/Connection Indicator




### Keyboard – Back View

1. Battery Cover
2. On/Off Switch
3. Reset Button

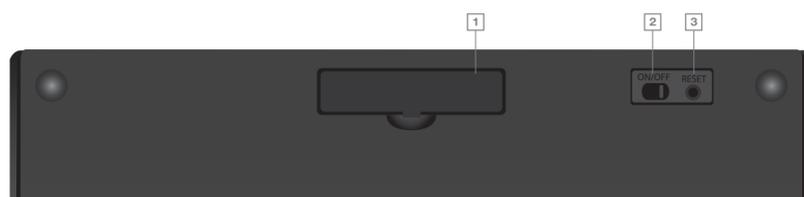

## Installing the batteries

1. Open the battery cover in the back of the keyboard
2. Insert the two pieces of AAA alkaline batteries. Make sure the batteries are installed properly as the directions that are indicated inside the battery tray.
3. Close the battery cover

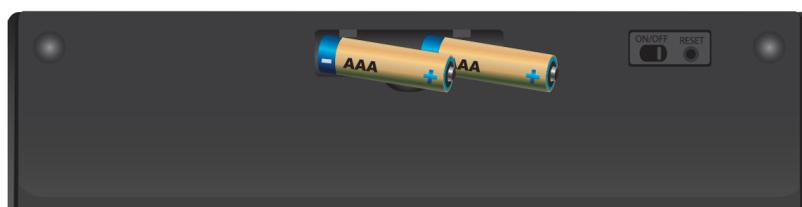

2

3

## Pairing Keyboard

### Pairing Bluetooth keyboard with Bluetooth enabled device or Bluetooth Host

1. Turn on the Bluetooth function in the device.
2. Switch Bluetooth keyboard (GKB601B) power to "On" position.
3. Press and hold "Fn" and then press "1" on the Bluetooth keyboard. Then release together.
4. Press "Reset" button on the back of the keyboard to activate Bluetooth discovering. (Connection indicator LED on the keyboard will flash during pairing)
5. Launch the Bluetooth program in the Bluetooth enabled device or Bluetooth Host
6. Add (Search) for new devices. Users should be able to find a new device "GKB601B".
7. During the connection process, it will provide a pass CODE for pairing. Enter the pass CODE from the keyboard.
8. Wait for adding a new HID device "GKB601B" into the system.

### Pairing Bluetooth keyboard with additional Bluetooth enabled devices or Bluetooth Hosts

1. Turn on the device or Bluetooth Host and make sure the Bluetooth device is set in "Search" mode.
2. Switch Bluetooth keyboard (GKB601B) power to "On" position.
3. Press and hold "Fn" and then press "2" on the Bluetooth keyboard. Then release together.
4. Press "Reset" button on the back of the keyboard to activate Bluetooth discovering. (Connection indicator LED on the keyboard will flash during pairing)

Subsequent steps are the same as pairing with the first device. The Bluetooth keyboard can pair with up to 6 different Bluetooth enabled devices. The user can use the keyboard to control 6 different Bluetooth enabled devices.

## Switching to the desired device

1. Make sure to turn on Bluetooth for the desired device.
2. Press and hold "Fn" and press the device number (1-6). Then release together.
3. The keyboard will connect to desired device.

User also can press and hold "Fn" and press "Tab" to connect to the previous device.

**Important: If a user switches to an unpaired device number, the user will need to wait about 2-5 second to switch to another device.**

## Package Contents

- 1 x Mini Multi-Link Bluetooth Keyboard
- 2 x AAA Battery
- 1 x Quick Start Guide
- 1 x Carrying Pouch
- 1 x Warranty Card

## Requirements

### Computer / Device\*

- Bluetooth Enabled Host Device

### Operating System\*\*

- Windows XP
- Windows Vista (32-bit / 64-bit)
- Windows 7 (32-bit / 64-bit)
- Mac OS X v10.3.9 or later\*\*\*
- iPhone / iPad with iOS 4 or later\*\*\*

\* Device must support USB HID keyboard device in order to have the keyboard functionality respectively.

\*\* Media Center hotkeys are only supported with the operating systems that have Microsoft Windows Media Center.

\*\*\* Some Mac special keys may not work

## Master Reset

If a user forgets the devices paired with the keyboard and would like to reset the keyboard to factory default, simply press and hold the "Reset" button for more than 3 seconds. The keyboard will erase all devices which were paired with the keyboard.

## Function Keys

There are 23 sets of function keys in this keyboard. To invoke these functions, hold the function button (Fn) then press the function key (the keys with blue letters).

### Normal Function Keys

| Function  | Description |
|---|-------------|
| Home  | Fn + Home   |
| End   | Fn + End    |
| Insert  | Fn + Ins    |
| Page Up   | Fn + PgUp   |
| Page Down   | Fn + PgDn   |
| Number Lock   | Fn + Num Lk |
| Screen Lock   | Fn + Scr Lk |
| Launch Web Browser or go to Home Screen (Only for iPod) | Fn +        |

### Media Center Shortcut Keys

| Function                            | Description      |
|-------------------------------------|------------------|
| Launch Windows Media Center         | Fn + MCE         |
| Launch My TV                        | Fn + My TV       |
| Launch My Videos                    | Fn + My Videos   |
| Launch My Music                     | Fn + My Music    |
| Launch My Pictures                  | Fn + My Pictures |
| Record TV                           | Fn + Record TV   |
| Play DVD (within Media Center only) | Fn + DVD         |
| Rewind                              | Fn +             |
| Fast Forward                        | Fn +             |
| Play/Pause                          | Fn +             |
| Stop                                | Fn +             |
| Volume Up                           | Fn +             |
| Volume Down                         | Fn +             |
| Channel Up                          | Fn + Ch+         |
| Channel Down                        | Fn + Ch-         |

5

4