

**OUTSIDE**

**Limited Warranty**

**WE'RE HERE TO HELP YOU!  
NEED ASSISTANCE SETTING UP THIS PRODUCT?**

Make sure you:  
 1. Use the live chat at [www.iogear.com](http://www.iogear.com) to try and solve any issues you may be having with the product  
 2. Visit the Tech Info Library/FAQ on [www.iogear.com](http://www.iogear.com) (under the Support tab)  
 3. Call the 24/7 tech support line at 1(866) 946-4327 (U.S. only) or (949) 453-8782

**Warranty Information**  
 This product carries a 1 Year Limited Warranty. For the terms and conditions of this warranty, please go to <http://www.iogear.com/support/warranty> or call 1-866-946-4327

Register online at <http://www.iogear.com/register>

Important Product Information  
 Product Model \_\_\_\_\_  
 Serial Number \_\_\_\_\_

**Contact**

**IOGEAR Inc.**  
 Address: 23 Hubble, Irvine, CA 92618 USA  
 Toll Free: 866-9-IOGEAR  
 Phone: 949-453-8782  
 Web site: [www.iogear.com](http://www.iogear.com)  
 Email: [support@iogear.com](mailto:support@iogear.com)



**Package Content**

- 1 x 4-Port HDMI Switch
- 1 x Remote Control
- 1 x Full Range Power Adapter
- 1 x US Prong Adapter
- 1 x German Prong Adapter
- 1 x Quick Start Guide
- 1 x Warranty Card


**System Requirement**

- HDTV or display with a female HDMI input connection
- Digital media source devices with a female HDMI output connection

**INSIDE**

**Overview** Start Here!


- |                               |               |                          |
|-------------------------------|---------------|--------------------------|
| 1. IR Receiver                | 6. Port 1     | 11. Previous Port        |
| 2. HDMI Port Switching Button | 7. Port 2     | 12. Power Adapter        |
| 3. Power Adapter Port         | 8. Port 3     | 13. US Prong Adapter     |
| 4. Output Port                | 9. Port 4     | 14. German Prong Adapter |
| 5. 4 x Input Ports            | 10. Next Port |                          |

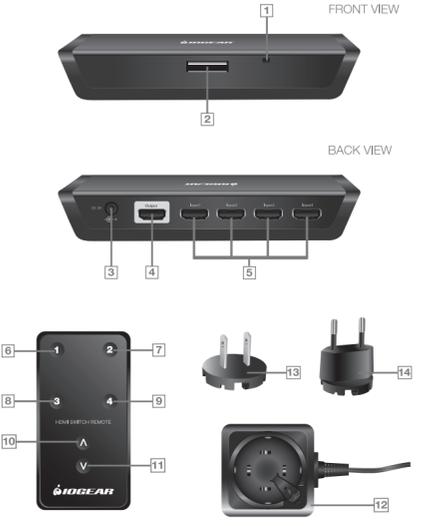

**Installation**

**STEP 1**  
 Insert the appropriate prong adapter onto the power adapter and turn the prong clockwise to lock the prong onto the power adapter.

\*To remove the prong from the power adapter, press and hold the Push button and turn the prong counter clockwise to unlock the prong. Then you can remove it from the power adapter.

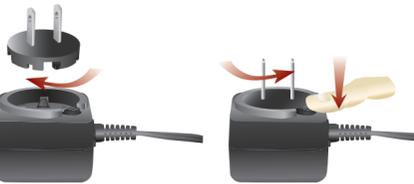

**STEP 2**  
 Connect the power adapter to the power outlet and the HDMI switch's power adapter port.



**Installation**

**STEP 3**  
 Connect a HDMI cable to the output port from the HDMI switch and any input port from the HDTV or display.



**FINAL STEP**  
 Connect any HDMI media devices on the input ports of the HDMI switch.



\*A male DVI to female HDMI Adapter is required (Not included)

**Remote Control**

Button	Description
1	Switch to Port 1
2	Switch to Port 2
3	Switch to Port 3
4	Switch to Port 4
^	Switch to next port (ex. If you are on Port 1, you will switch over to Port 2)
v	Switch to previous port (ex. If you are on Port 1, you will switch over to Port 4)

