

Limited Warranty

WE'RE HERE TO HELP YOU!
NEED ASSISTANCE SETTING UP THIS PRODUCT?

Make sure you:
1. Use the live chat at www.iogear.com to try and solve any issues you may be having with the product
2. Visit the Tech Info Library/FAQ on www.iogear.com (under the Support tab)
3. Call the 24/7 tech support line at 1-866-946-4327 (U.S. only) or 1-949-453-6782

Warranty Information
This product carries a 3 Year Limited Warranty. For the terms and conditions of this warranty, please go to <http://www.iogear.com/support/warranty> or call 1-866-946-4327

Register online at <http://www.iogear.com/register>

Important Product Information
Product Model _____
Serial Number _____

Contact

IOGEAR Inc.
Address: 23 Hubble, Irvine, CA 92618 USA
Toll Free: 866-9-IOGEAR
Phone: 949-453-8782
Web site: www.iogear.com
Email: support@iogear.com

About Us

- FUN**
IOGEAR offers connectivity solutions that are innovative, fun, and stylish, helping people enjoy daily life using our high technology products.
- GREEN**
IOGEAR is an environmentally conscious company that emphasizes the importance of conserving natural resources. The use of our technology solutions helps reduce electronic waste.
- HEALTH**
IOGEAR supports healthy and fit lifestyles. By integrating products with the latest scientific developments, IOGEAR's solutions enhance the life of end users.



Quick Start Guide
2.4GHz Multimedia Keyboard with Laser Trackball
and Scroll Wheel

Package Contents

- 1 x Multimedia Keyboard
- 1 x USB RF Receiver
- 1 x Cleaning Cloth
- 2 x AA Battery
- 1 x Quick Start Guide
- 1 x Warranty Card

System Requirements

Computer / Devices
• USB port

Operating System
• Windows® XP/ Vista32/64*
• Mac OS X (or higher)**

Devices***
Consumer Electronic: Game Consoles, Media Servers, and HDTV

*Media Center hot keys only support Windows XP MCE and Vista Premium editions.

**Some function keys are not available.

***Devices must have HID Support (USB Keyboard / Mouse Support) in order to obtain keyboard functionality

Overview

Start Here!

 
Keyboard – Front View

1. Mouse Left Click
2. Mouse Right Click
3. Battery low Indicator
4. Scroll Wheel
5. Last Track
6. Next Track
7. Play / Pause
8. Stop
9. Mute
10. Volume Up
11. Volume Down
12. Default Homepage (Internet Explorer)
13. Laser Trackball




Keyboard – Back View

1. ON/OFF Switch
2. Reset Button
3. Battery Cover

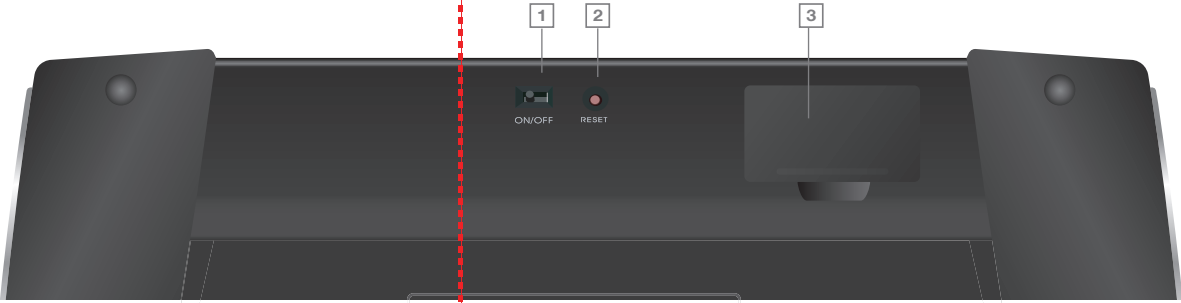

USB RF Receiver

 1. USB Connection
2. ID Button

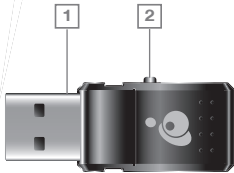


Installation

STEP 1
Connect the USB RF receiver into any open USB port of your computer. Windows® will then recognize the receiver and install the drivers automatically.




 STEP 2
Open the battery cover in the back of the keyboard and insert the 2 included AA batteries into the battery tray.* Then, close the battery tray by putting the battery cover back on.

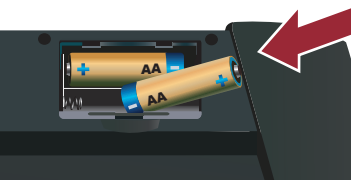

*Note: Please make sure the batteries are installed properly as the directions that are indicated inside the battery tray

 
STEP 3
Turn on the keyboard by switching the ON/OFF switch to the ON position.

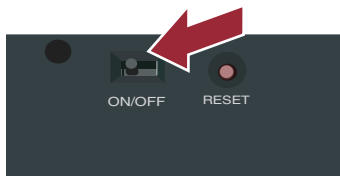

FINAL STEP
Now the keyboard and trackball should be working properly. If the keyboard and trackball are not working, please see the Pairing section.

Pairing

 STEP 1
Press the ID button on the USB RF receiver while it is connected to the computer.

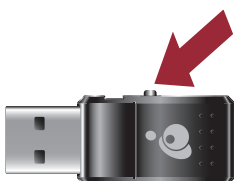

STEP 2
Press the Reset button in the back of the keyboard next to the ON/OFF switch while the keyboard is in ON status.



FINAL STEP
Now the keyboard and trackball should be working properly. If the keyboard and trackball are not working, please repeat step 1 and step 2 in Pairing section.

Sleep Mode

When the keyboard is idle for 30 minutes, it will go into sleep mode for battery saving purpose. Simply press any key to wake the keyboard up and resume usage.

Function Keys

There are 19 sets of function keys in this keyboard. To invoke these functions, hold the function button (Fn) then press the function key (the keys with blue letters).

Normal Function Keys

Function	Description
Home	Fn + Home
End	Fn + End
Insert	Fn + Ins
Page Up	Fn + PgUp
Page Down	Fn + PgDn

Changing Laser Trackball's DPI

Function	Description
Change trackball's resolution to 400DPI	Fn + 400DPI
Change trackball's resolution to 800DPI	Fn + 800DPI
Change trackball's resolution to 1200DPI	Fn + 1200DPI

Media Center Shortcut Keys

Function	Description
Launch Windows Media Center	Fn + MSE
Launch My TV	Fn + My TV
Launch My Videos	Fn + My Videos
Launch My Music	Fn + My Music
Launch My Pictures	Fn + My Pictures
Record TV	Fn + Record TV
Play DVD (within Media Center only)	Fn + DVD
Rewind	Fn + ⏮
Fast Forward	Fn + ⏭
Channel Up	Fn + Ch+
Channel Down	Fn + Ch-