

Federal Communications Commission (FCC) Statement

This product has been tested and found to comply with the limits for a Class B device, pursuant to part 15 of the FCC Rules. It is intended for use in residential setting, but may also be used in commercial or industrial setting.

CE Compliance

This device has been tested and found to comply with the following European Union directives: Electromagnetic Capability (89/336/EMC), Low Voltage (73/23/EEC) and R&TTED (1999/5/EC).

Limited Warranty

WE'RE HERE TO HELP YOU!
NEED ASSISTANCE SETTING UP THIS PRODUCT?

Make sure you:
1. Use the live chat at www.iogear.com to try and solve any issues you may be having with the product
2. Visit the Tech Info Library/FAQ on www.iogear.com (under the Support tab)
3. Call the tech support line at 1-866-946-4327 (U.S. only) or 949-453-8782

Warranty Information

This product carries a 1 Year Limited Warranty.
For the terms and conditions of this warranty, please go to <http://www.iogear.com/support/warranty> or call 1-866-946-4327

Contact

Toll Free 866-946-4327 (USA)
Phone: 949-453-8782
19641 Da Vinci, Foothill Ranch, CA 92610

www.iogear.com
support@iogear.com



QuickStart Guide (For PC)

Mobile Digital Pen with Flash Drive

GPEN300
PART NO. Q1338

About Us

FUN
IOGEAR offers connectivity solutions that are innovative, fun, and stylish, helping people enjoy daily life using our high technology products.

GREEN
IOGEAR is an environmentally conscious company that emphasizes the importance of conserving natural resources. The use of our technology solutions helps reduce electronic waste.

Creating Notes

Creating Notes While in Mobile Mode

While in mobile mode, you can store all your handwritten notes into the Receiver. Press the "Power" button until the Power LED turns on and stops flashing. Press the clip as shown in the pictures and center the Receiver at the top of the page. To add a new page, open the clip, change the sheet of paper and return the Receiver back to its previous location. A "new page" will be created automatically.

Step 1



Step 2



 
While writing, make sure the line of sight between the Pen and the Receiver remains clear. Keep your fingers away from the crystal cone at the lowest part of the pen



Viewing / Editing Notes

Viewing the notes


The Pen&Ink Viewer is an application stored in the flash memory. This application does not need to be pre-installed on any computer. When you wish to view the notes, connect the receiver to your PC or Mac. Simply select "Launch Pen&Ink Viewer" and then click ok. The Pen&Ink Viewer will allow users to save and e-mail their notes as PDF file.

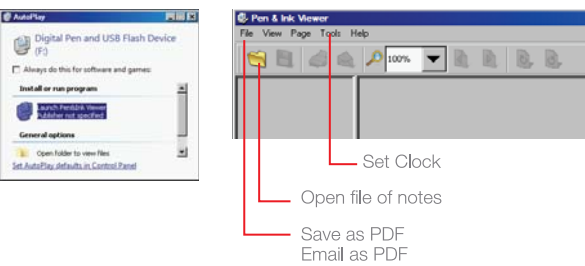

Editing the notes

Pen&Ink Editor is a graphic editor allowing your digital files to be edited, converted, e-mail, and saved in various formats.

 For more information refer to the User Guide. Go to:
Start Menu > Digital Pen & USB Flash Drive > User Guide

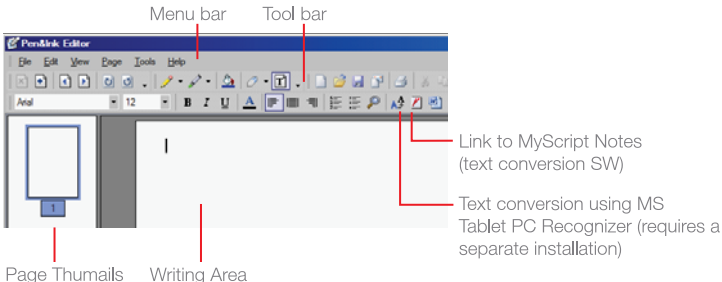

MyScript Notes

MyScript Notes enables users to convert personal handwriting to text.

Installation

Insert the installation CD and follow the installation instructions. You will find the license key (S/N) at the back of the Installation CD cover.
After successful installation of MyScript Notes, the button should appear on Pen&Ink Editor to enable prompt use of the software

Operation in Pen&Ink Editor

MyScriptNotes enables converting handwriting to text. After using the digital pen to capture your handwriting, user can click the MyScript Notes button located on Pen&Ink toolbar. This will open MyScript Notes application. By clicking the "start conversion" button the handwriting will be converted to text. This text can be exported as an email, word, or text.

MyScript Notes Operation

Use MyScript Note software to edit your notes. Simply connect the receiver to your PC/Mac and then launch the MyScript Note program. Select the notes you want to edit from flash memory receiver. You can convert the note into image file (JPG) or doc/text file.
For more information, users can follow CONVERSION section by clicking **HELP > CONVERSION**

In order to improve the handwriting conversion accuracy, it is strongly recommended that users go through the "MyScript Trainer" which comes with the software.

Start > Vision Objects > MyScript Notes 3 > MyScript Trainer

Dictionary Function

This additional tool allows you to create your own personal dictionary. This results in you not having to write down the entire word, once programmed the your key words will "auto populate" for you.
Preferences > Dictionary > Auto replacements

For example:
When you write IO you can instruct the pen to write IOGEAR automatically.

When you are ready to adopt more advanced features, be sure to visit: www.iogear.com

Package Content


- | | |
|---|---|
| 1 x Digital Pen (Including 2 batteries) | 1 x MyScript Notes installation CD (32 bit system only) |
| 1 x Receiver | 1 x Quick Start Guide |
| 1 x USB extension cable | 1 x Warranty Card |
| 1 x Pen&Ink Viewer (Stored on Flash Memory) | 1 x Software CD and User Manual (Windows OS only) |

Device Overview

Start Here!

The 1GB Flash Memory Receiver

- | | |
|-------------|-----------------|
| 1. On / Off | 4. Microphone |
| 2. Pause | 5. Reset Button |
| 3. USB Cap | |

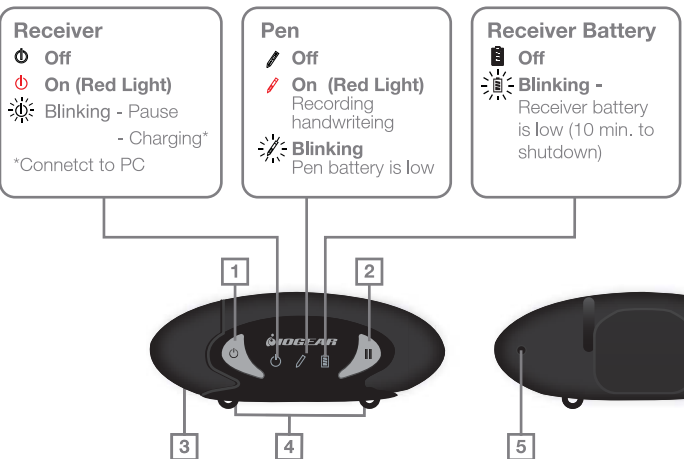 

Important: Do not format the receiver. If a user accidentally formatted the receiver, please visit IOGEAR Support/Drivers & Manuals section to download the software.

 
1

Mouse Mode

Mouse Mode can be used for note taking, editing, drawing, or as a standard computer mouse.

Switch to Mouse Mode

1. Connect the receiver to the PC.
2. Wait until it has been identified as Mass Storage Device.
3. Press the "Power" button and wait a few seconds until the battery LED stops flashing.

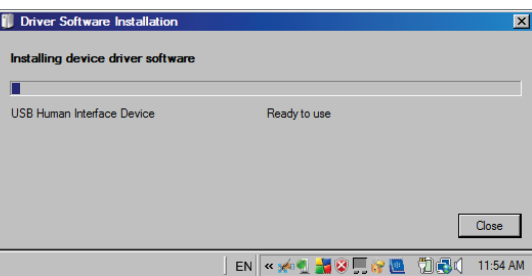

When in Mouse Mode, users are not able to access the receiver's flash memory. To return to Mass Storage Device, press the "Power" button again.

How to use the digital pen as a mouse in on-line mode


Function	How to use
Hovering*	Activate the pen by tapping on the surface or by pressing the lower pen button.
Click	Tap the pen on the surface or press the lower pen button
Double Click	Tap the pen twice on the surface or press the lower pen button twice
Right Click	Press the upper pen button

*The pen will hover without having to tap again or press the lower pen button for about 25 seconds.

6

The Digital Pen

 1. Pen Tip
2. Rubber Grip
3. Left Button
4. Right Button



Software Installation

 
Before first using your IOGEAR Mobile Digital Pen, please make sure you have installed the product driver software from the Software CD. The Software CD contains the Mobile Digital Pen driver. Simply insert the Mobile Digital Pen Software CD and follow the wizard's instructions. The Installation Wizard gives you the link to install the Microsoft Tablet PC Recognizer by directing you to the Microsoft website (for Windows XP Pro). This option will enable you to convert handwriting to digital text. Windows Vista and Windows 7 users have already handwritten conversion capabilities pre-installed (Excluding Vista Home Basic).

MyScript Notes Full Version OCR (Optical Character Recognition) software is only needed if you wish to convert your handwritten notes to text for use in e-mail or a word processor. The software also contains the training section for users to increase the handwriting conversion rate.

Hardware Installation

Charge

Prior to using the receiver and digital pen, please charge the receiver for 6 hours.

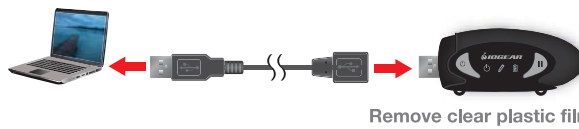

Initial use of the pen

1. The digital pen comes with two batteries (Standard 393 watch batteries) already inserted.
2. Remove the cap in the back of the pen.
3. Remove the small isolator strip from the battery compartment, as depicted in the picture



2

Deleting Notes

Please follow the below steps to delete the notes.

1. Plug the receiver to the PC/Mac
2. Make sure the receiver is in the "Storage Mode"
3. Open the USB drive by double click the "Digital Pen and USB Flash Device"
4. Double click "My Notes" folder

5. Select the notes that user wishes to delete and press Delete key from the keyboard
Important: Once users delete the note, the note will not be able to be recovered.

 
Replacing the Digital Pen batteries

1. Remove the cap
2. Pull out battery tray
3. Remove the old batteries and insert new batteries



Replacing the ink cartridge

1. Remove the ink refill by using tweezers (not included) to pull on the tip.
2. Insert a new cartridge in its place (Standard Mini Ballpoint ink refill)



7