


IOGEAR GUIP204 USB Sharing Hub

v. 2.0 Driver Installation Instructions


Warning:

The v. 2.0 driver software only works with v. 2.0 Firmware.
Please follow instructions below:

1. If you have previously installed the driver with earlier versions, uninstall the program from “Control Panel”.
2. Restart your computer.
3. Install the new driver software.
4. Restart your computer.
5. Follow the Firmware Update instructions below to update the firmware.
- Right click on the Server and select **Server Configurations**

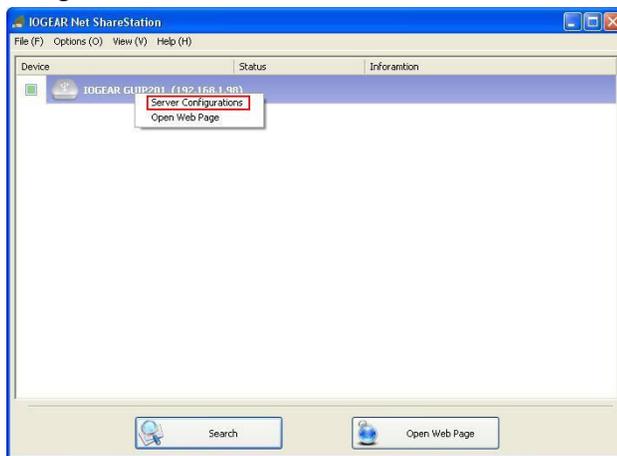

- Click on “Update Firmware” and follow instructions to complete the firmware update.

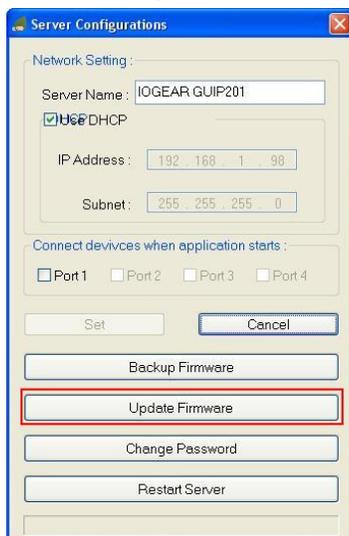

6. Restart your computer.
7. Read the v. 2.0 user manual (Part No. M1057-a on the manual cover) for operating instructions.