


GUV302P_FW_v1.0.001 Install

1. Connect GUV302P Mobile Capture adapter to your PC via included cable.
2. Extract all files from zip folder "GUV302P_FW_v1.0.001.zip"
3. Open folder "GUV302P_FW_v1.0.001"
4. Right click on "P2pdRomProgram_v2.4.01.exe" and run as administrator
 - a. This program will run in the background, you will not see a window pop up
5. Next Run file "FW_UPDATE_v1.0.001.bat"
 - a. A command prompt window will open.
 - b. Once you see "Burn Pass" update is complete

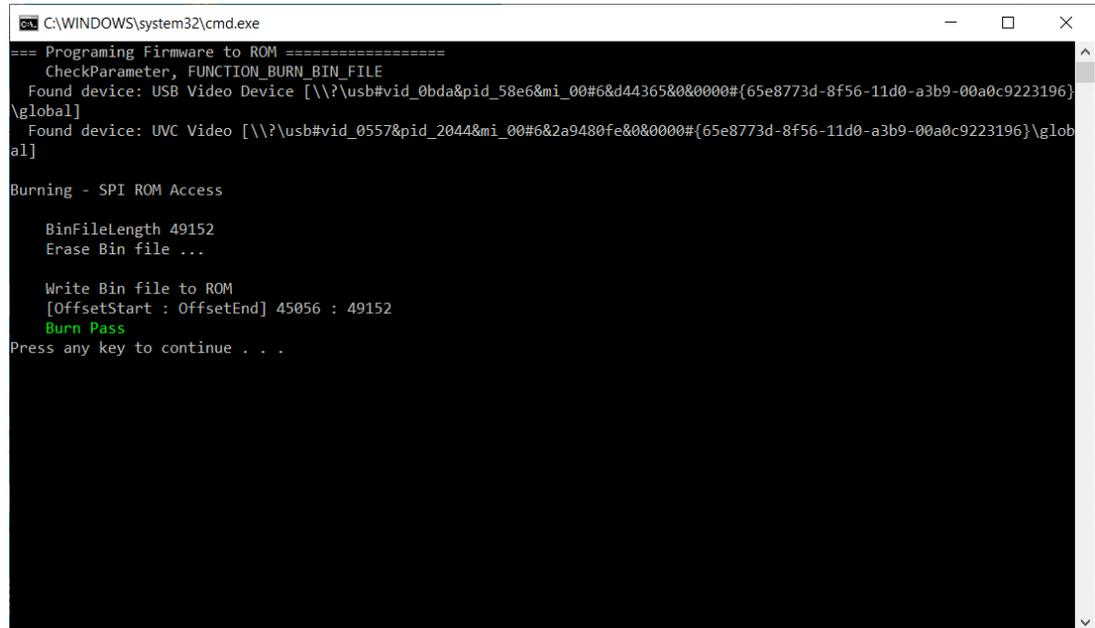

```
C:\WINDOWS\system32\cmd.exe
=== Programing Firmware to ROM ===
CheckParameter, FUNCTION_BURN_BIN_FILE
Found device: USB Video Device [\\?\usb#vid_0bda&pid_58e6&mi_00#6&d44365&0&0000#{65e8773d-8f56-11d0-a3b9-00a0c9223196}\global]
Found device: UVC Video [\\?\usb#vid_0557&pid_2044&mi_00#6&2a9480fe&0&0000#{65e8773d-8f56-11d0-a3b9-00a0c9223196}\global]
Burning - SPI ROM Access

BinFileLength 49152
Erase Bin file ...

Write Bin file to ROM
[OffsetStart : OffsetEnd] 45056 : 49152
Burn Pass
Press any key to continue . . .
```

- c. Press any key to finish FW update