

GPSU01 Product Manual Addendum Rev. 01

Setup Procedure for Windows 98/ME/2000/XP

NOTE: Under Windows 98/ME, you must initially install your Printer being hooked up locally, before you run it through the Print Server

1. Turn off the printer.
2. Install any protocols (if necessary) in Windows 98/ME/2000/XP
NOTE: Although multiple protocols can be installed, it is preferable to install only one. The three most used network protocols are **IPX/SPX**, **TCP/IP** or **NetBEUI** (see glossary for further information on these protocols). **TCP/IP** has become the most commonly used protocol today. Please refer the Glossary to see the detailed definition of each protocol.

The procedure is as follows: (Windows 2000/XP)

1. Open **Control Panel**



Control Panel

2. Open **Network and Dial-up Connections**



Network and
Dial-up
Connections

3. Select **Local Area Connection**



Local Area
Connection

4. Click **File**, then click **Properties**
5. Click **Install**
6. Select **Protocol**, then click **Add**
7. Choose the protocol that you wish to use, then click **Ok**.

The procedure is as follows: (Windows 98/ME)

1. Open the **Control Panel**



Control Panel

2. Open **Network**




Network

3. A list of installed network adapters and protocols will be listed. If you wish to add a specific one, click **Add**.

Add...

4. Select **Protocol**, then click Add.

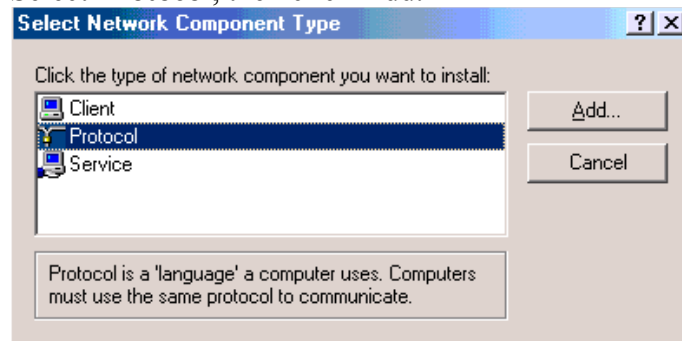

5. You will be presented with a list of protocols to install.